




COOKTOP PARTS

For Models: RS696PXGB13, RS696PXGQ13
(Black) (Designer White)

30" ELECTRIC
DROP-IN RANGE
SELF CLEANING
OVEN

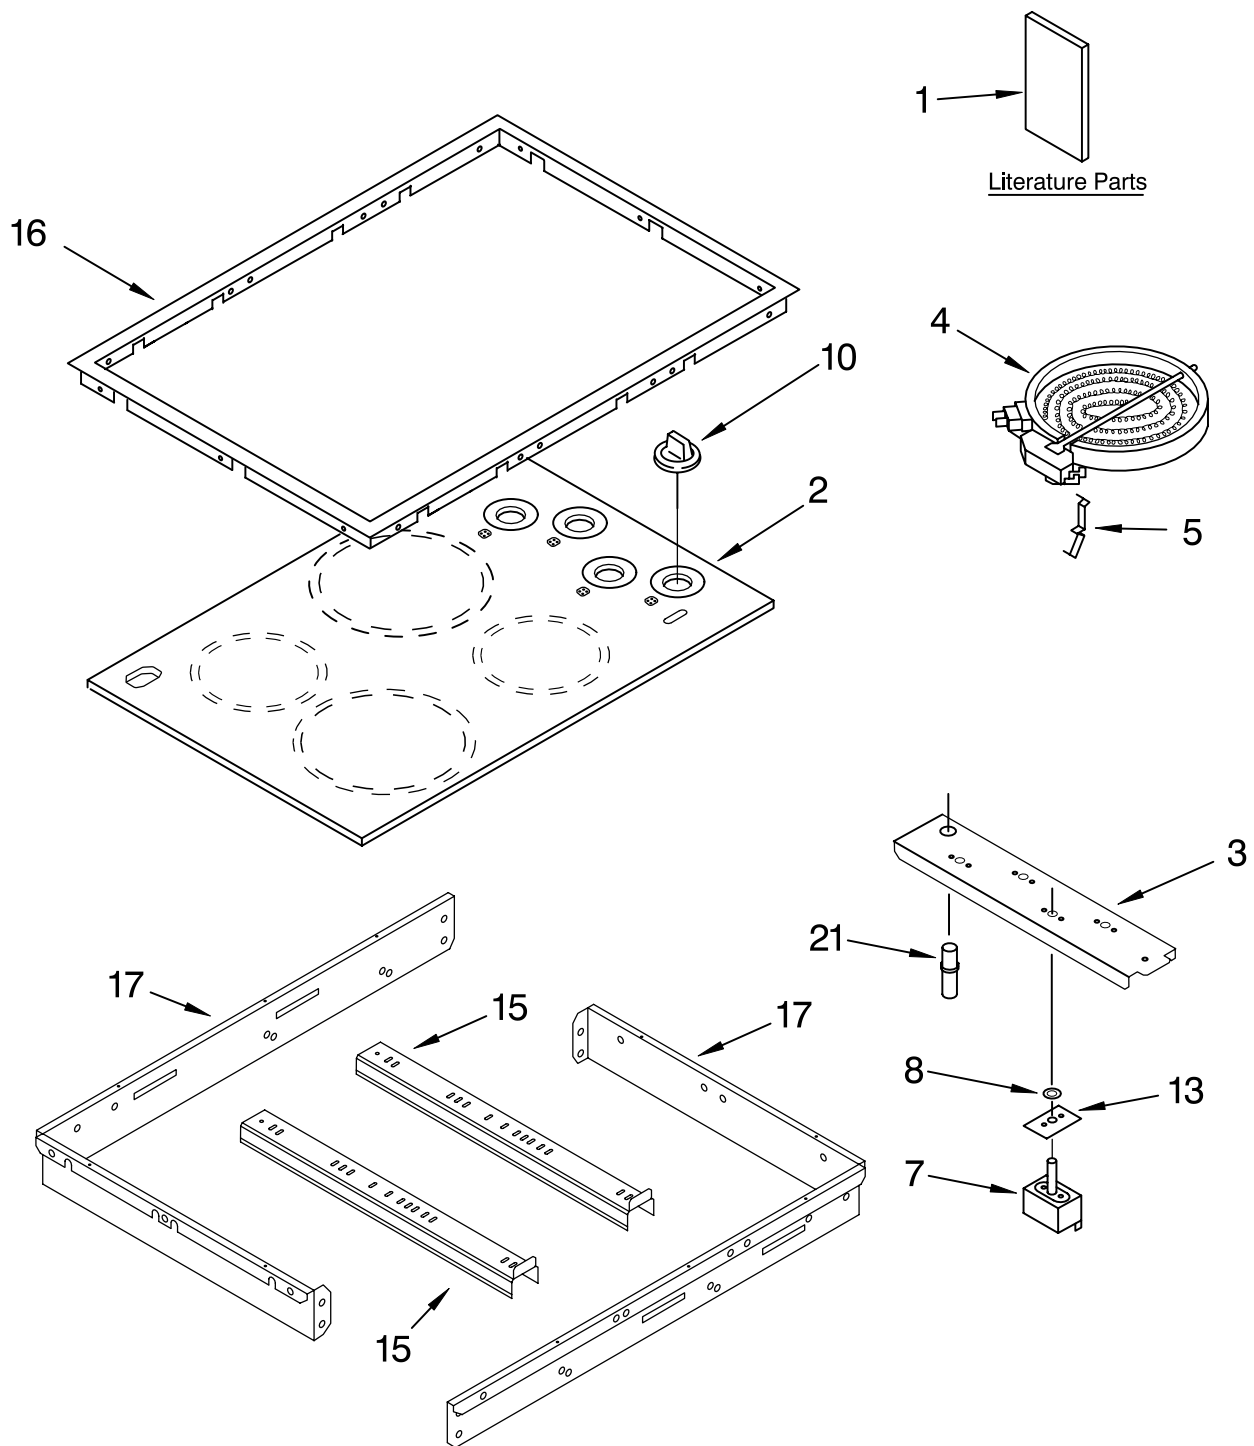

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP PARTS

For Models:RS696PXGB13, RS696PXGQ13
(Black) (Designer White)

Illus.	Part	
No.	No.	DESCRIPTION


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1		Literature Parts
	LIT8300770	Installation Instructions
	LIT8300666	Use & Care Guide
	LIT8302073	Tech Sheet
	LIT3191638	Safe Cooking Tips
2		Cooktop, Glass
	3191843	Black
	3191189	White
3	3191310	Bracket, Switch Mounting
4		Element, Surface
	8523698	1200W RF-LR
	8523696	1800W RR
	8523692	2500W LF
5	3191791	Spring, Locator
	246119	Screw (8)
7		Switch, Infinite
	3191049	1200W RR-LR (Silver Shaft)
	3191050	1800W RR (Yellow Shaft)
	4454541	2500W LF (Red Shaft)
	311865	Screw
8	3183956	Seal, Switch Cover
10		Knob, Control (4)
	3196231	Black
	3196232	White
13	8285469	Seal, Switch
15	3191515	Bracket, Support Element
16		Trim Ring, Cooktop
	3193228	Black
	3193227	White
	3196537	Screw
17	3192452	Frame, Cooktop
21	3191952	Lamp, Indicator
	3191953	Bumper, Rubber
	9750835	Bumper, Door

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: RS696PXGB13, RS696PXGQ13
(Black) (Designer White)

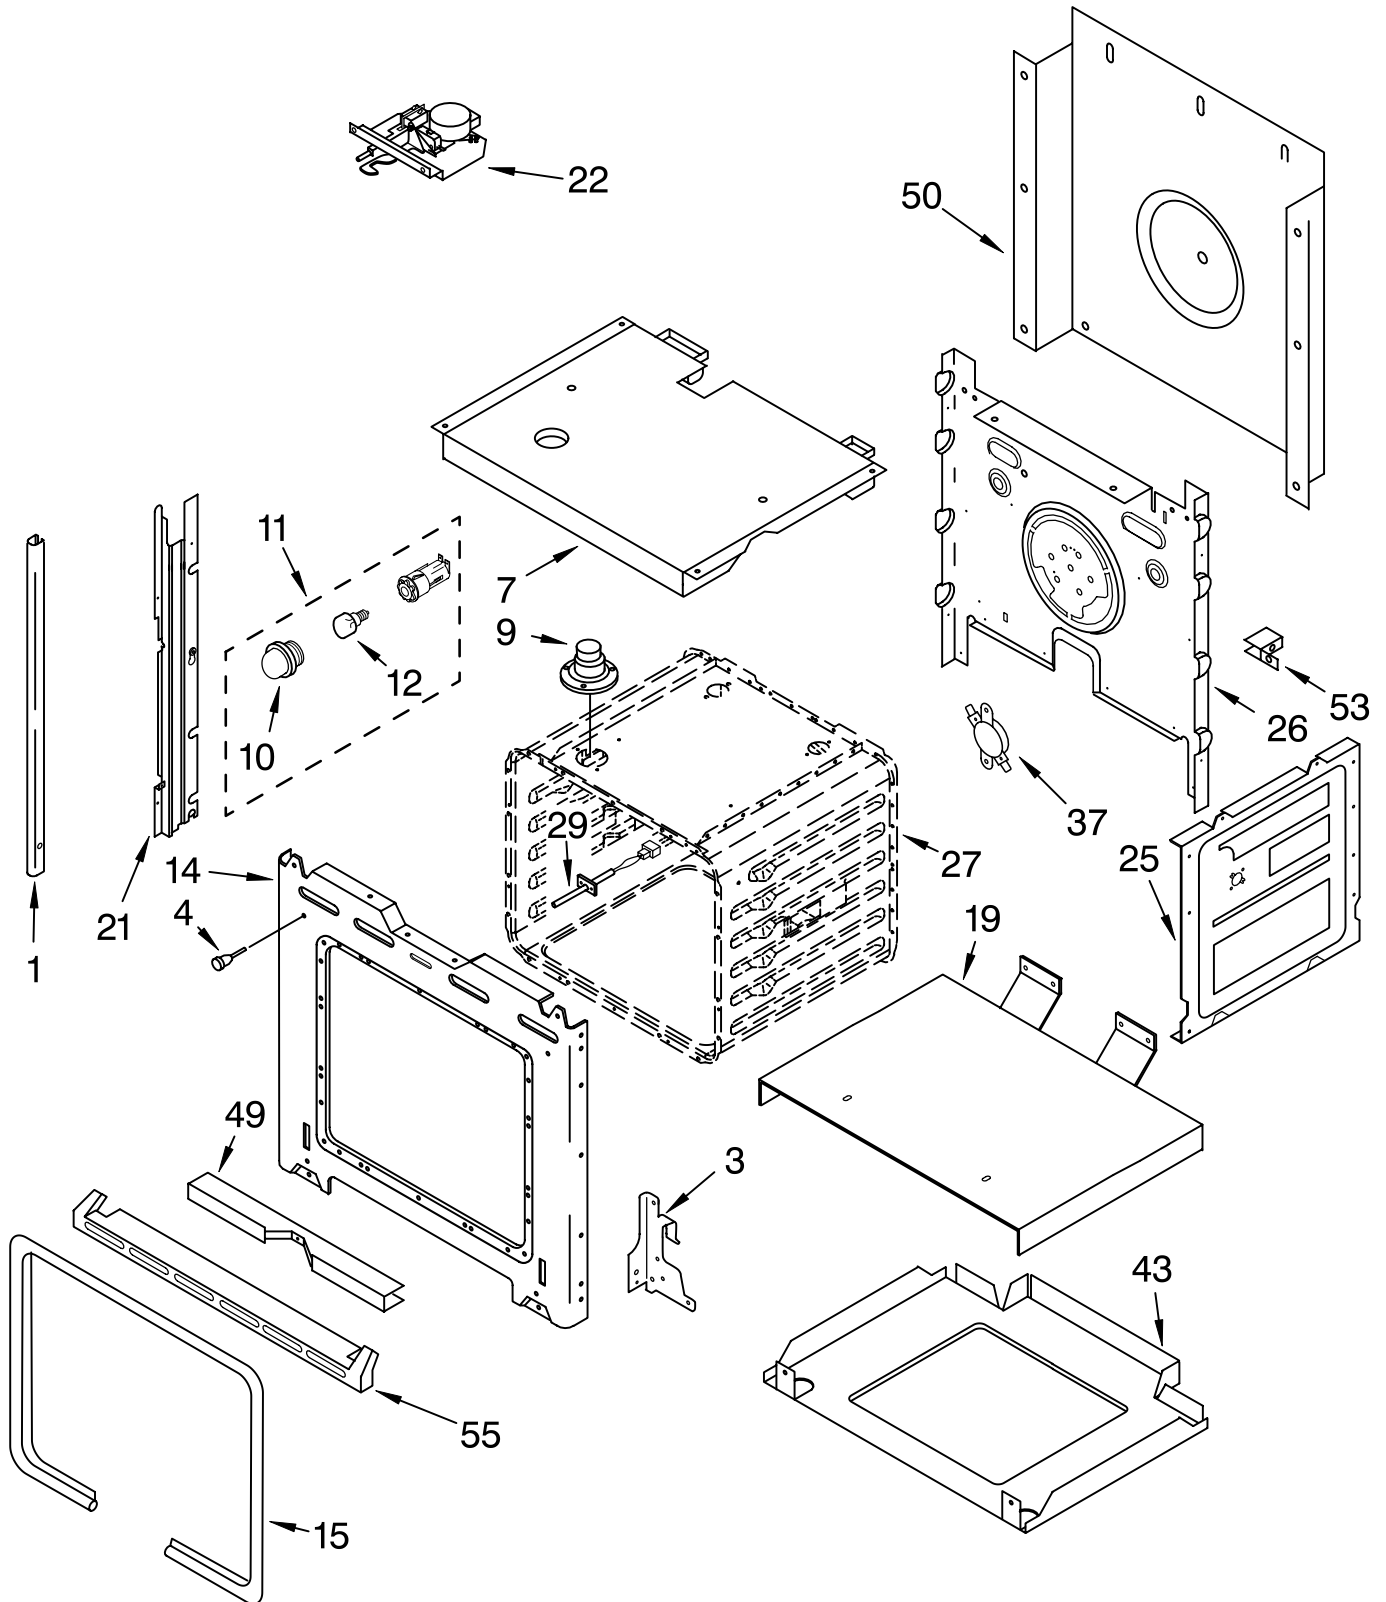

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: RS696PXGB13, RS696PXGQ13
(Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1		Trim, Side (Right Hand)
	4450844	Black Model
	4449747	Screw
	4450845	White Model (Left Hand)
	4450847	Black Model
	8281236	Screw
	4450848	White Model
		Screw
3		Hinge Receiver
	4455605	Left Hand
	4455606	Right Hand
4	4448520	Bumper, Door
7	4455865	Top Chassis
	4449809	Screw

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

9	4452158	Tube, Vent
	3196176	Screw
10	4452165	Lens, Light
11	4452368	Oven Light Assy
12	4452166	Bulb, Light
14	4455612	Frame, Front
	4449040	Screw
	4450118	Nut
15	4455382	Gasket, Door
19	4451478	Support, Insulation
	4449809	Screw
21		Rail, Side
	4450579	Right Side
	4450580	Left Side
	4448444	Grommet
	4449154	Screw
22	8302157	Latch, Motorized
25	4455641	Side, Chassis (R.H. & L.H.)
	4449809	Screw
26	4452234	Back, Chassis
	4449809	Screw
27		Liner, Oven (Not serviceable)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

29	4455636	Sensor
	4449154	Screw
37	4451442	Thermostat (TOD) (Temp.) SPST
43	4455530	Base, Chassis
49	4448933	Retainer, Gasket
	4449154	Screw
50	4451747	Cover, Back
	4449809	Screw
53	4449845	Support, Bracket
	4449809	Screw
55		Trim, Bottom
	4448477	Black Model
	4448478	White Model


FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

4449316	Insulation, Wrap
4450365	Insulation, Back

CONTROL PANEL PARTS

For Models: RS696PXGB13, RS696PXGQ13
(Black) (Designer White)

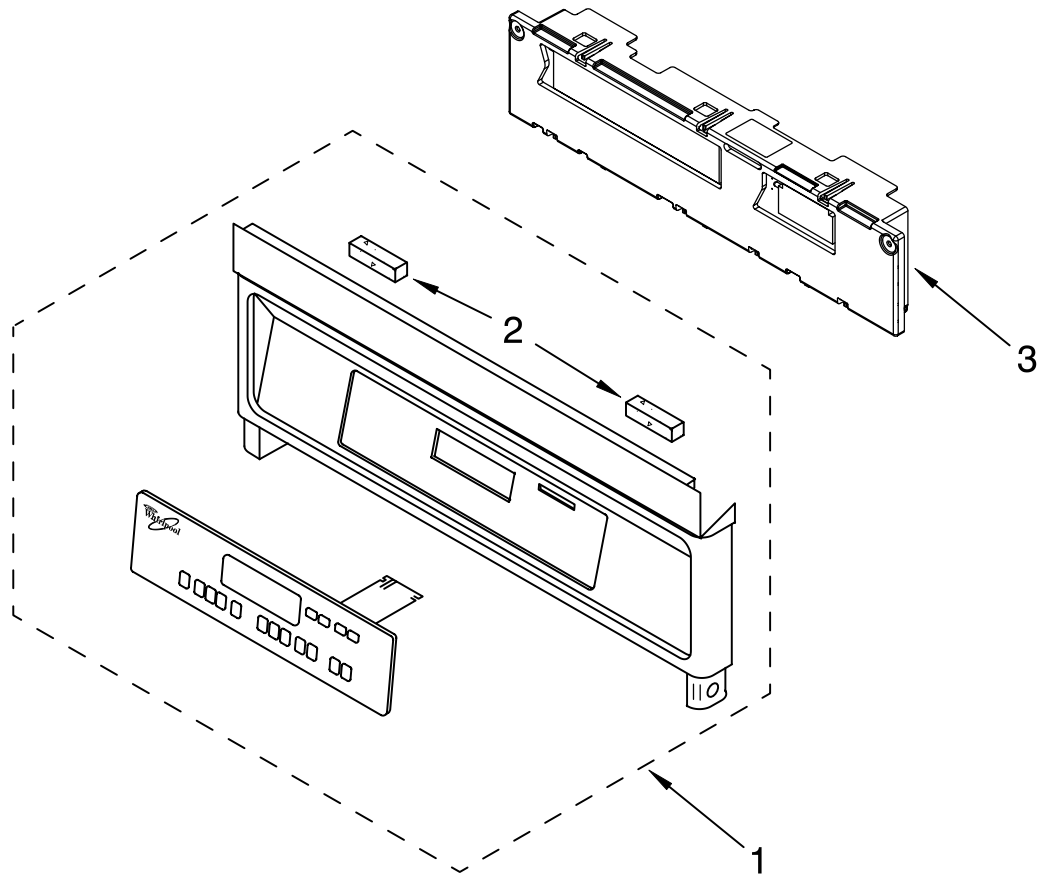

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	Control Panel Assy. W/Membrane Switch
4456312	Black Model
4456311	White Model
4449745	Screw
3400832	Screw
2	4451034 Gasket, Control Panel
3	8301919 Assy, Control
4449745	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN DOOR PARTS

For Models: RS696PXGB13, RS696PXGQ13
(Black) (Designer White)

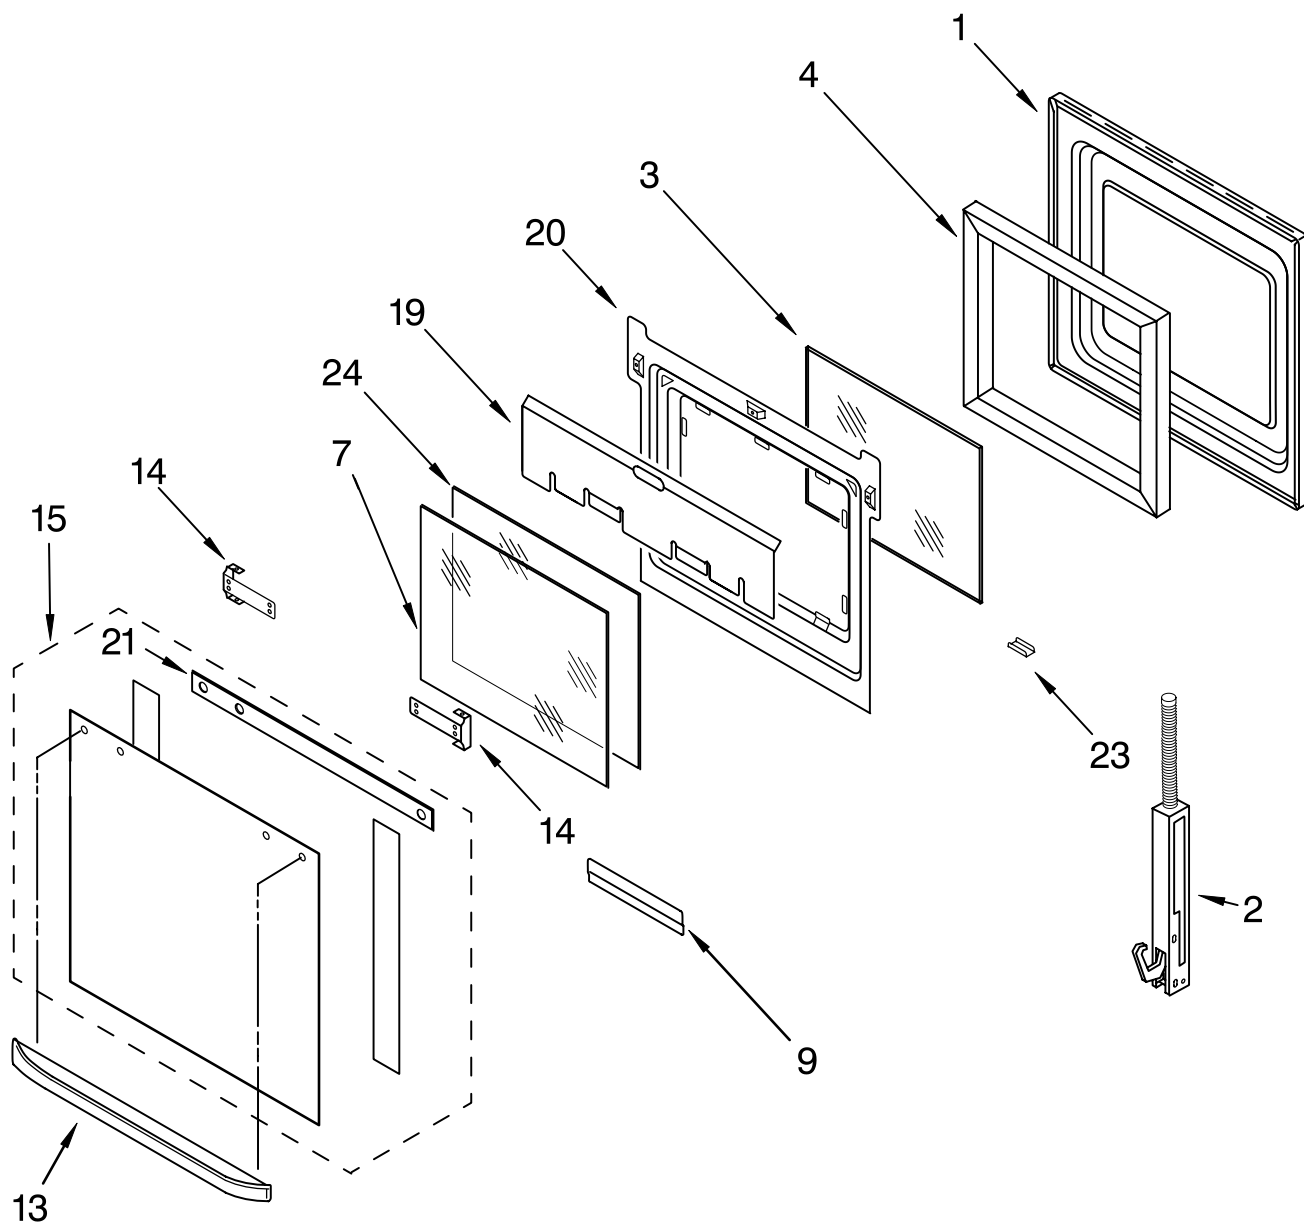

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4455618	Door Liner
2		Hinge, Door
	8300571	R.Side
	8300572	L.Side
	4449743	Screw

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

3	4449259	Glass, Inner
4	4451722	Insulation, Door
7	4449263	Glass, Inner
9	4450470	Retainer, Glass
	4449809	Screw
13		Door Handle
	4448854	Black Model
	4448855	White Model
14	4450813	Bracket, Handle
	4451040	Screw


Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

15		Assy, Door Glass
	8300903	Black Model
	8300899	White Model
19	4450362	Shield, Heat
	4449809	Screw
20	8300778	Retainer, Glass
	4449809	Screw
21	8300820	Seal, Door Top
23		Retainer, Clip
	4450863	Black Model
	4450864	White Model
24	8300974	Glass, Inner

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models: RS696PXGB13, RS696PXGQ13
(Black) (Designer White)

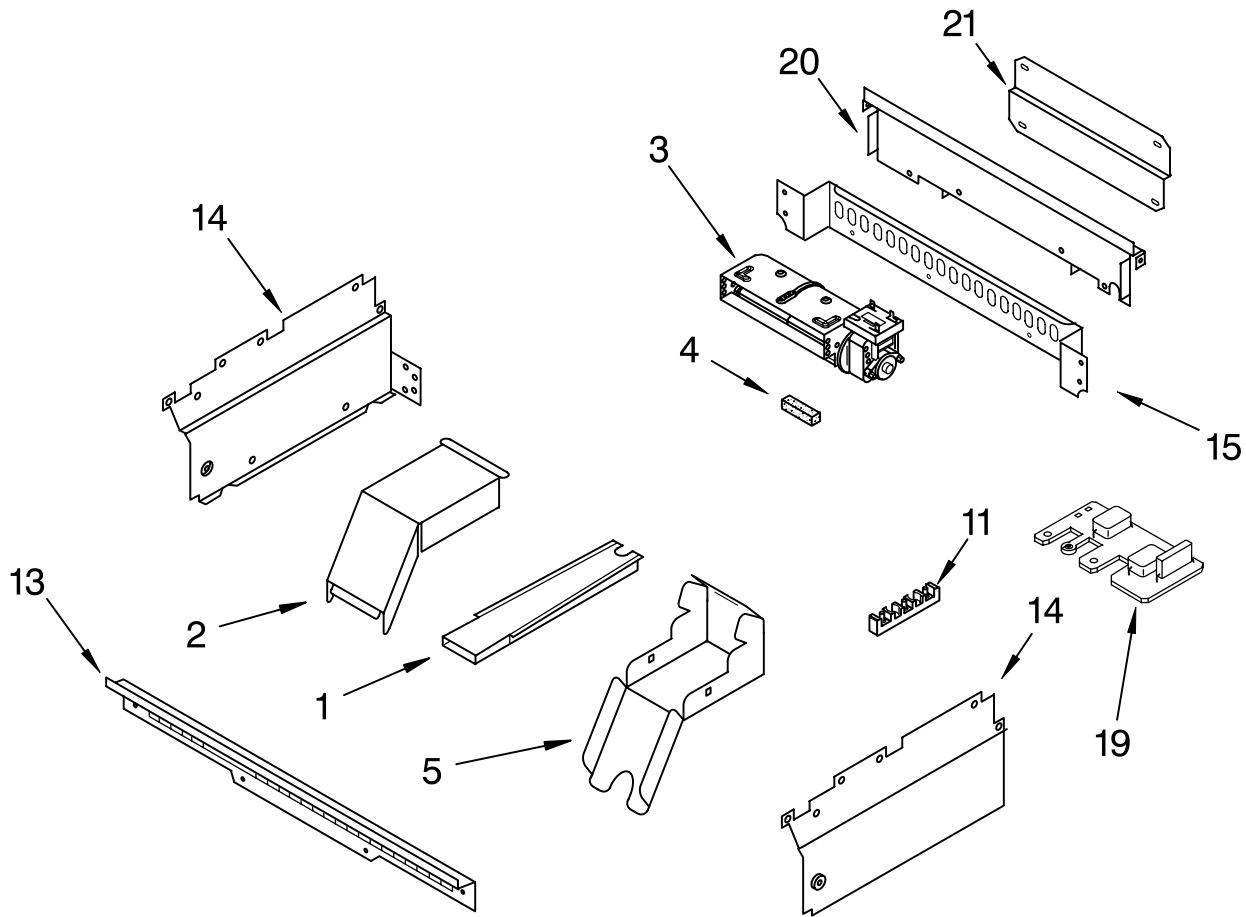

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4451759	Vent, Exhaust
	4449040	Screw
2	4455178	Elbow, Vent-Top

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

3	4455334	Blower
	4455352	Bracket
4	4451758	Block, Foam
5	4455177	Elbow, Vent-Bottom
11	4449868	Block, Terminal
	3400080	Screw
13	4448549	Vent, (Control Panel)
	4450038	Screw

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------


14		Side, Control Compt.
	4451535	Right
	4451536	Left
	4449809	Screw
15	4452244	Back, Control
	4449809	Screw
19	4451985	Suppressor
20	3191842	Cover, Rear
21	4451407	Plate, Support
	4452260	Spacer, Foam

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Models: RS696PXGB13, RS696PXGQ13

(Black) (Designer White)

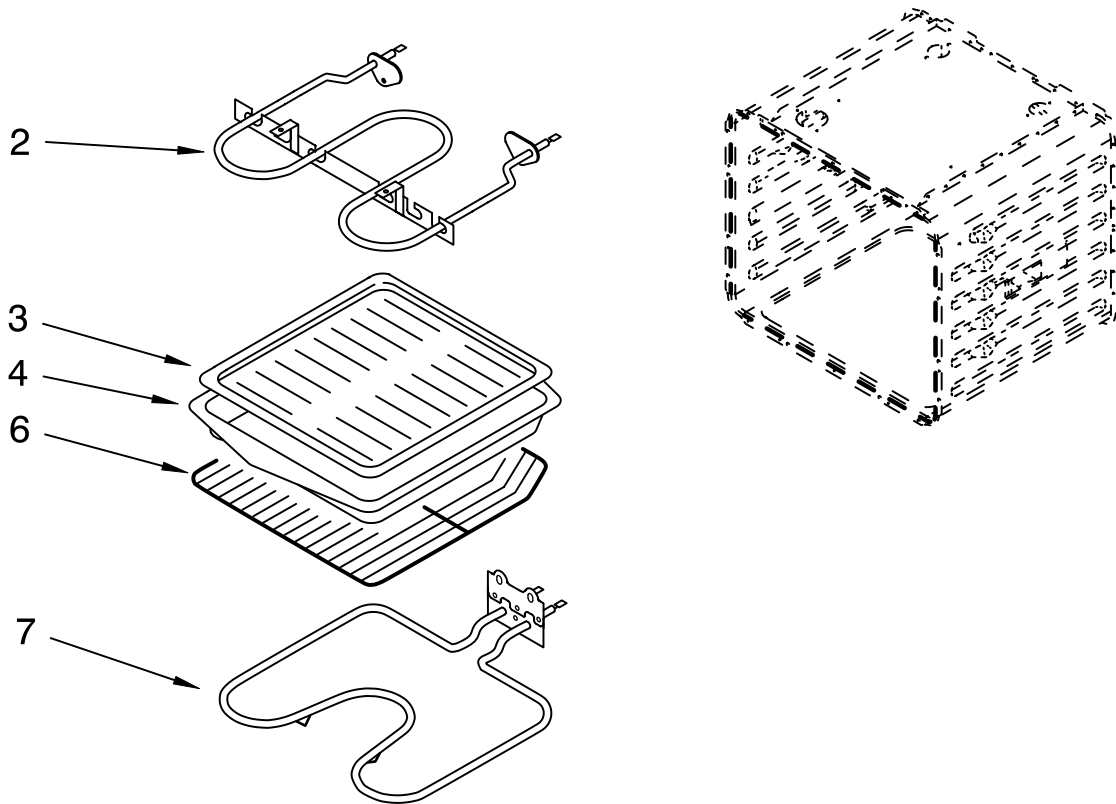

Illus. No.	Part No.	DESCRIPTION
2	4456103	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
6	4448717	Rack, Oven
7	4452153	Element, Bake
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models:RS696PXGB13, RS696PXGQ13
(Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------

PAINT, TOUCH-UP (1/2oz.)

72017	White
261869	Cord Brown
72032	Black

PAINT, SPRAY

350930	White
261900	Citrine White
830864	Black

ADHESIVE

591014	Adhesive Loctite (1/3 oz.)
482338	Sealer, Silastic (3 oz.)

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------

SPLICING WIRES--25FT.

LENGTH

242828	Wire (12 Ga. 150 c Black)
242820	Wire (14 Ga. 150 c Black)
242821	Wire (14 Ga. 150 c Blue)
242822	Wire (14 Ga. 150 c Brown)
242830	Wire (14 Ga. 200 c Brown)
242823	Wire (14 Ga. 150 c Green)
242824	Wire (14 Ga. 150 c Orange)
242829	Wire (12 Ga. 150 c Red)
242825	Wire (14 Ga. 150 c Red)
242831	Wire (14 Ga. 200 c Red)
242826	Wire (14 Ga. 150 c White)
242827	Wire (14 Ga. 150 c Yellow)
242832	Wire (14 Ga. 200 c Yellow)

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------

WIRING HARNESS PARTS

8301876	Harness, Wire (Main)
4456646	Harness, Wire (Infinite Switch)
4456529	Harness, Wire (Burners)
4451163	Conduit
4448664	Clamp
4449809	Screw
112432	Nut
4450800	Screw, Ground
4451761	Support, Wiring
4454842	Tie, Cable
4452222	Spacer, Harness

Miscellaneous

814381	Pin Hinge Kit
4448950	Screw, Install (4)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST